

## **Application Note**

# GreenPAK in Solar Systems Maximum Power Point Trackers MPPT

**AN-CM-284** 

#### **Abstract**

This Application note describes how to use GreenPAK for the full system of Maximum Power Point Tracker in Solar Systems.



### **Contents**

Ak	stract				1
Сс	ntents	š			2
Fiç	gures.				2
Та	bles				3
1	Term	s and De	efinitions		4
2					
3					
J	3.1			eplace All the Components? And for All the Known MPPT	
	5.1				5
	3.2	Photovo	oltaic Cell Ch	naracteristics	5
	3.3	System	Block Diagr	ams	6
	3.4	How It V	Vorks		8
		3.4.1	System Bl	locks Implementation	9
			3.4.1.1	PV cell Current Sensing	9
			3.4.1.2	PV Cell Voltage Sensing	9
			3.4.1.3	Duty Cycle Updater and Stability Study:	10
	3.5	Hardwa	re Connecti	on and Testing Results	10
		3.5.1	PV Cell E	mulator	10
		3.5.2	Validation	Tests:	11
		3.5.3	Start-up D	Outy Cycle Increase	11
		3.5.4	Testing th	e Duty Updater Frequency:	12
		3.5.5	Instability	Example	12
		3.5.6	Power Sta	age Circuit	12
4	Cond	lusions.			14
Re	vision	History			15
Fi	gure	es			
Fig	gure 1:	VI & PV	Curve of a F	Photovoltaic Cell	5
Fiç	gure 2:	MPPT P	er Panel Sys	stem Diagram	6
				with GreenPAKon with GreenPAK (a)	
				on with GreenPAK (b)	
				on a PI Curve	
				ck	
				ck	
				ling	
				ements	
Fiç	gure 12	2: Duty C	ycle Update	r Output Testing	12
Fig	gure 13	: Instabil	ity Example	st Converter)	12
ı-ιζ	jui <del>e</del> 14	. FUWEI	Stage (DOOS	outverter)	13
۸r	nlicati	ion Note		Pavision 1.0	03_101_2010

### **AN-CM-284**



### **GreenPAK in Solar Systems Maximum Power Point Trackers MPPT**

Figure 15: PC Cell Voltage with the Operation of the MPPT	13
Tables	
Table 1: Pin Configuration of the GreenPAK	. 8



#### 1 Terms and Definitions

MPPT Maximum power point tracker

MPP Maximum power point
OV Open circuit voltage
SC Short circuit current
SW Switching frequency

DC Duty cycle

#### 2 References

For related documents and software, please visit:

https://www.dialog-semiconductor.com/configurable-mixed-signal.

Download our free GreenPAK Designer software [1] to open the .gp files [1] and view the proposed circuit design. Use the GreenPAK development tools [3] to freeze the design into your own customized IC in a matter of minutes. Dialog Semiconductor provides a complete library of application notes [4] featuring design examples as well as explanations of features and blocks within the Dialog IC.

- [1] GreenPAK Designer Software, Software Download and User Guide, Dialog Semiconductor
- [2] AN-CM-284 GreenPAK in Solar Systems Maximum Power Point Trackers MPPT.gp, GreenPAK Design File, Dialog Semiconductor
- [3] GreenPAK Development Tools, GreenPAK Development Tools Webpage, Dialog Semiconductor
- [4] GreenPAK Application Notes, GreenPAK Application Notes Webpage, Dialog Semiconductor
- [5] "Predictive & Adaptive MPPT Perturb and Observe Method", IEEE Transactions on Aerospace and Electronic Systems (Volume: 43, Issue: 3, July 2007)
- [6] "Optimization of perturb and observe maximum power point tracking method", IEEE Transactions on Power Electronics (Volume: 20, Issue: 4, July 2005).



#### 3 Introduction

The PV panels are special power supplies that deliver a green and renewable power. PV panels have non-constant power based on many parameters (sun irradiation and angle, shadow percentage, temperature and hotspot effect issue). The solar panel contains a matrix of solar cells that converts the sun irradiation to power. Connecting more cells in a matrix delivers more power but only 23 – 40 % of the maximum power. The MPPTs "Maximum power point trackers" are made to push the solar panel to work at the maximum power point in the power curve. The solar cells in the matrix are not equal and the irradiation & sun angle is not equal over them. While using one MPPT per panel increases the maximum power generated to 65 % of the actual power that the panel can deliver. Using MPPT per cell is expensive as it uses many components and the board would be bigger than the cell itself. GreenPAK can solve this dilemma by replacing the huge number of components in the MPPT systems by a GreenPAK IC with inductor or a single GreenPAK and a capacitor bank for the matrix.

### 3.1 Does GreenPAK Replace All the Components? And for All the Known MPPT Algorithms?

GreenPAK can replace the MPPT controllers and sensors, but MOSFETs and the power inductor make up about 70 % of the MPPT circuit. GreenPAK is suitable for almost all MPPT algorithms like perturb and observe, fuzzy control etc.

#### 3.2 Photovoltaic Cell Characteristics

The Figure 1 below shows the VI & PI curve of a photovoltaic cell indicating the maximum power point in the curve.

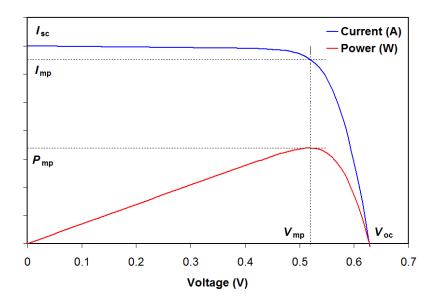


Figure 1: VI & PV Curve of a Photovoltaic Cell

The system is an implementation of one of the MPPT algorithms to get the maximum power of a cell. Shown in the Figure 2 is the main connection of a big panel that contains a matrix of PV cells with one Boost converter and MPPT controller.



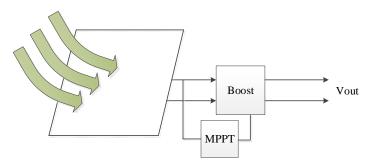


Figure 2: MPPT Per Panel System Diagram

### 3.3 System Block Diagrams

This application note shows you how to create your own PV source that you can add to your system for renewable power charging. You will need fewer components to get the system working. A GreenPAK, two MOSFETs and an inductor are needed for this system instead of a big circuit to implement the MPPT algorithm.

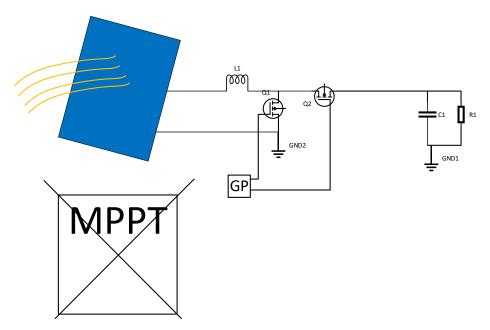


Figure 3: MPPT Replacement with GreenPAK

Figure 3 shows the advantages of having a GreenPAK in the system. Mainly the size reduction and fast design are the advantages of using GreenPAK in this application. The circuit can be attached to the PV cell to get a portable PV charger with full features of stability monitoring and protection.

Figure 4 shows the MPPT implementation with GreenPAK. The design keeps the system working at the maximum power point of the PV cell to a tolerance of 2.5%.



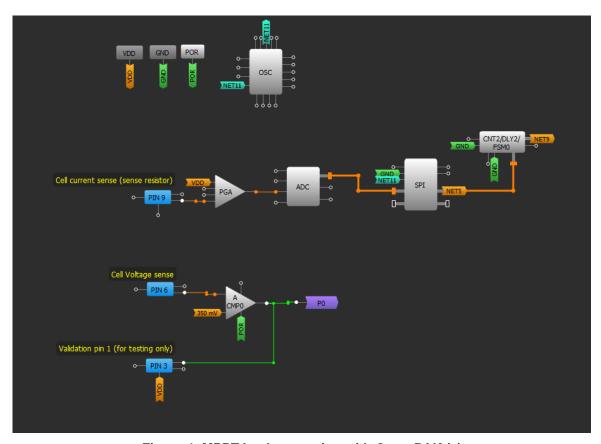


Figure 4: MPPT Implementation with GreenPAK (a)

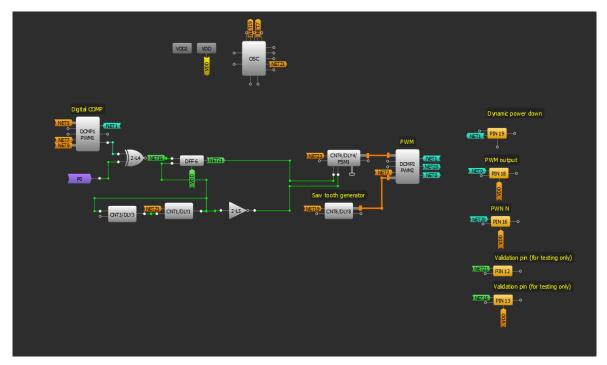


Figure 5: MPPT Implementation with GreenPAK (b)



Pins configuration:

Table 1: Pin Configuration of the GreenPAK

#	PIN	Setup	Description
1	PIN3	OUTPUT	Validation pin, for testing only
2	PIN6	INPUT	Vsense, an analogue input to sense the PV Cell voltage
3	PIN9	INPUT	I sense, an analogue input to sense the PV Cell current from a Rsense
4	PIN12	OUTPUT	Validation pin, for testing only
5	PIN13	OUTPUT	Validation pin, for testing only
6	PIN16	OUTPUT	PWM High side, connect to Q2 in power converter
7	PIN18	OUTPUT	PWM Low side, connect to Q1 in power converter
8	PIN19	OUTPUT	Dynamic power down

#### 3.4 How It Works

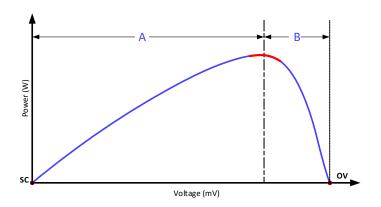


Figure 6: Operation Regions on a PI Curve

The circuit will be connected to a current sense resistor to determine the current difference and sensing the output voltage at the same time. To force the system producing the maximum power we push the operating point to the maximum power point by sensing the input current and voltage to determine if the system is at MPP or not. The system determines if the running voltage is below or higher than the MPP. We can divide the voltage-power curve into two regions, Region A at left and region B at right of the maximum power point as shown in Figure 6. The GreenPAK will determine if the voltage is in region A or B.

Sensing the current and voltage helps the system to update the duty cycle based on the  $\Delta I$  and voltage value, this will help the MPPT to determine if the system at a region A or B (see Figure 6) then update the PWM value based on this decision to move the operating point toward the MPP. The MPPT starts from the open load point (V max @ no output current) then moves to the MPP and oscillates around it until changes happen in one of the parameters (sun Irradiation, shadow and temperature). By changing the shadow, sun angle, TEMP, or sudden shadow happened, the cell will continue delivering the maximum power it can deliver without affecting the rest of cells in the matrix.



To create a power plant, the user can easily attach the GreenPAK to each cell to get maximum power of the cell but the output voltage isn't a steady value as the main aim is maximum power. The user can use any DC-DC converter to get the suitable voltage for his system based on the application.

#### 3.4.1 System Blocks Implementation

Implementing the block diagram shown in Figure 5 using GreenPAK SLG46621V in detail.

#### 3.4.1.1 PV cell Current Sensing

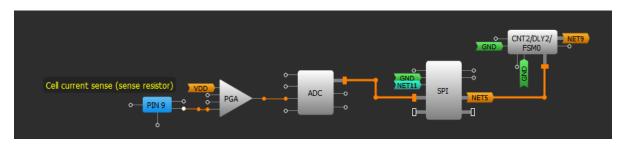


Figure 7: Current Sensing Block

Sensing the current is a good way to improve the system accuracy of updating the duty cycle and to have limitations not to hit the short circuit point.

### 3.4.1.2 PV Cell Voltage Sensing

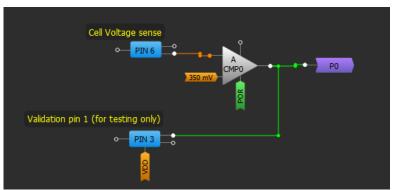


Figure 8: Voltage Sensing Block

Sensing the voltage of the PV cell to let the system know if the duty cycle needs to be incremented or decremented to track the maximum power point. Sensing the voltage helps to know the direction of the duty cycle update, and sensing the current defines the increment/decrement value. Once it hits the maximum power it continues updating the duty cycle in the same direction to perturb and observe if there is more power that can be harvested from the PV. In steady state the system will keep oscillating around the maximum power point.



#### 3.4.1.3 Duty Cycle Updater and Stability Study:

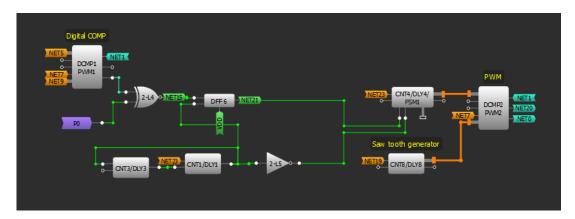


Figure 9: Duty Cycle Update Block

The system determines if the running voltage is below or higher than the MPP. The GreenPAK will determine if the running voltage is at region A or B. The XNOR output goes high in region B and low in region A based on the voltage and the Duty cycle updater which will increase or decrease the duty cycle accordingly.

The DC-DC converter requires enough time to settle down after the last duty cycle update, so the duty cycle updater must be slower than the switching frequency. Increasing the duty cycle updater frequency reduces the settling time for the system and causes instability. On the other hand, using a very slow duty cycle updater makes the system inefficient and requires a long time to track the maximum power. So it's important to get an optimum frequency that makes the system track the maximum power quickly without causing instability. The PV cells have slow variation in conditions of shadow and temperature, as these two changes in the seconds range, which is significantly slow, so updating the duty cycle in the range of few milliseconds is enough to get a stable and fast tracker. Choose the switching frequency you want for this system as this won't affect the controller but make sure that SW frequency is suitable for your components. Using higher frequency allows you to use smaller components and increases the SW loss, so find the optimum frequency for the power module you use and make sure this frequency is higher than the duty cycle updater frequency.

#### 3.5 Hardware Connection and Testing Results

#### 3.5.1 PV Cell Emulator

The Photovoltaic cell is a diode that generates power once photons hit it and creates a voltage difference. To mimic the same behavior of a PV cell your system for testing emulation, you simply substitute with the following:

Current source (Chroma E Load can do this)

Power diode.

Two resistors.

The following figure shows how to connect the components to emulate a PV cell and shows the output voltage of the model that emulates the actual behavior of a PV cell and how the model works. See the voltage curve at the shown three points (a,b and c) The VI curve at c simulates the exact behavior of a photovoltaic cell.



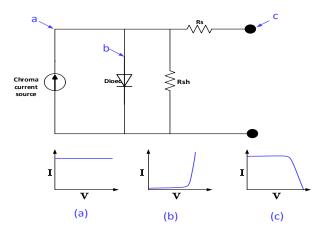


Figure 10: Photovoltaic Modelling

#### 3.5.2 Validation Tests:

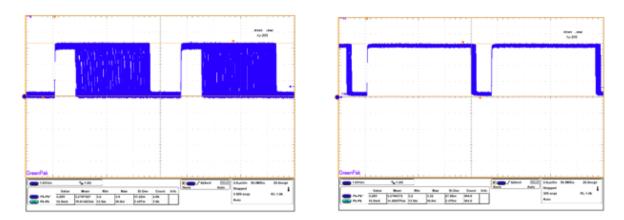


Figure 11: Duty Cycle Measurements

### 3.5.3 Start-up Duty Cycle Increase

The GreenPAK started from the OV point at voltage 550 mV at small duty cycle, then it increments the duty cycle that pushes the operating point toward the MPP. Once the system exceeds the MPP, it decrements the duty cycle back to track the MPP. In Figure 11 the system hovers around the MPP.



#### 3.5.4 Testing the Duty Updater Frequency:

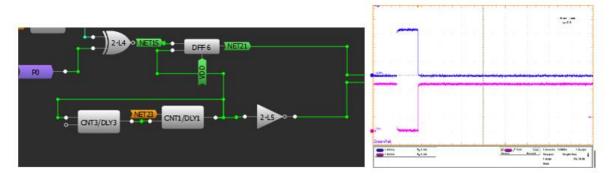


Figure 12: Duty Cycle Updater Output Testing

Figure 12 shows the signals at the duty cycle updater output. Channel 1 shows the data and channel 3 show the update/keep pin of the system.

#### 3.5.5 Instability Example

Instability shown in the figure below while using a very fast duty cycle update, as shown the system, updates the duty cycle very fast and the voltage takes time to settle down at the OV point. Then the system realizes that it is region B so it starts increasing the duty cycle very fast but the voltage settles down at the SC point.

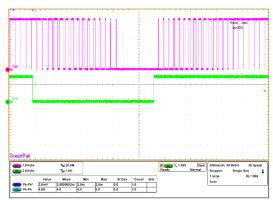


Figure 13: Instability Example

### 3.5.6 Power Stage Circuit

The GreenPAK will control a power Boost circuit to get the maximum power of the PV cell. The Boost converter mainly been used to step up the input voltage to a stable output voltage, but in the MPPT this is not the aim. The MPPT uses the Boost converter to act as an interface between the load and the PV by pushing the PV operating point to the maximum power point. In this circuit we are controlling the input impedance to grab the maximum power. The figure below shows the implementation of the Boost converter. This circuit is not the perfect implementation for a Boost converter. The user can create his own Boost converter or use one of the power trains in the market based on the selected PV cell power. High power applications require high current MOSFETs and larger inductors. In this case the application might require a MOSFET driver as the GreenPAK PWM won't be able to drive a very large MOSFET gate load.



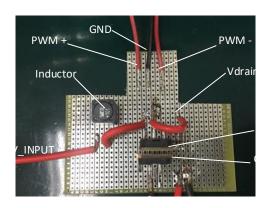


Figure 14: Power Stage (Boost Converter)

Figure 14 shows the start-up of the system. As mentioned before, it starts at the open circuit point and the GP starts to generate the Duty cycle and increase it to push the operating point toward the maximum power point and settle down oscillating around it. In Figure 15 below, we used a slow Frequency of the updater with resistive load parallel with  $3x\ 47\mu F$  as an output filter. Make sure to use a switching frequency higher than duty update frequency, and make sure that you don't have any short to avoid thermal failures and redoing your work.

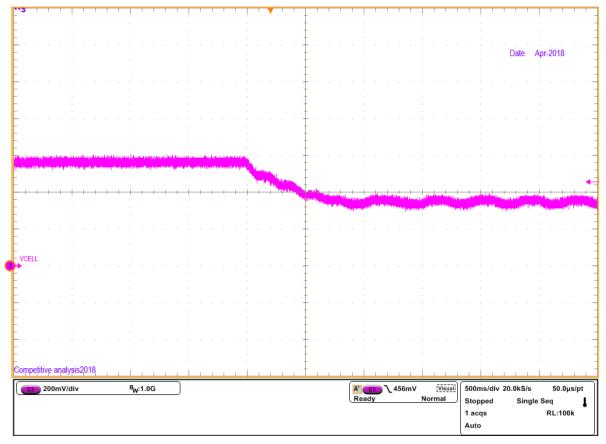


Figure 15: PC Cell Voltage with the Operation of the MPPT



#### 4 Conclusions

This GreenPAK app note demonstrated the full system implementation of a Maximum Power Point Tracker using the "Perturb and Observe" topology. The MPPT will keep the photovoltaic cell working at a voltage that delivers the maximum power. A designer can connect such a GreenPAK circuit to the system and realize the benefits of very low power consumption, and significant space savings.



### **Revision History**

Revision	Date	Description
1.0	03-Jul-2019	Initial Draft



#### **Status Definitions**

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

#### **Disclaimer**

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including without limitation the specification and the design of the related semiconductor products, software and applications.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Customer notes that nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document are subject to Dialog Semiconductor's Standard Terms and Conditions of Sale, available on the company website (www.dialog-semiconductor.com) unless otherwise stated.

Dialog and the Dialog logo are trademarks of Dialog Semiconductor plc or its subsidiaries. All other product or service names are the property of their respective owners.

© 2019 Dialog Semiconductor. All rights reserved.

### **Contacting Dialog Semiconductor**

United Kingdom (Headquarters)

Dialog Semiconductor (UK) LTD Phone: +44 1793 757700

Germany

Dialog Semiconductor GmbH Phone: +49 7021 805-0

The Netherlands

Dialog Semiconductor B.V. Phone: +31 73 640 8822

Email

enquiry@diasemi.com

North America

Dialog Semiconductor Inc. Phone: +1 408 845 8500

Japan

Dialog Semiconductor K. K. Phone: +81 3 5769 5100

Taiwan

Dialog Semiconductor Taiwan Phone: +886 281 786 222

Web site:

www.dialog-semiconductor.com

Hong Kong

Dialog Semiconductor Hong Kong Phone: +852 2607 4271

Korea

Dialog Semiconductor Korea Phone: +82 2 3469 8200 China (Shenzhen)

Dialog Semiconductor China Phone: +86 755 2981 3669

China (Shanghai)

Dialog Semiconductor China Phone: +86 21 5424 9058