

# Application Note

## Temperature Sensing Using the PV88080

### AN-PV-003

#### Abstract

*In many applications there is a need to monitor temperature and take action should the temperature of the system exceed the point of safe or reliable operation. This application note describes how to use the temperature sensing function of the PV88080 to alert the application's processor to an over-temperature condition.*

---

## Temperature Sensing Using the PV88080

### Contents

<b>Abstract</b> .....	<b>1</b>
<b>Contents</b> .....	<b>2</b>
<b>Figures</b> .....	<b>2</b>
<b>Tables</b> .....	<b>2</b>
<b>1 Terms and Definitions</b> .....	<b>3</b>
<b>2 References</b> .....	<b>3</b>
<b>3 Introduction</b> .....	<b>4</b>
<b>4 Temperature Sense function</b> .....	<b>4</b>
Over Temperature Design Example (100 degree C trigger point) .....	5
Thermal Sense Test Result .....	7
<b>5 Conclusions</b> .....	<b>8</b>
<b>Appendix A</b> .....	<b>9</b>
<b>Revision History</b> .....	<b>10</b>

### Figures

Figure 1: Temperature Sense block diagram .....	4
Figure 2: Temperature of NTC Thermistor .....	5
Figure 3: Variation of Resistance .....	6
Figure 5: Temperature vs Resistance .....	6
Figure 4: Temperature vs Resistance .....	7
Figure 6: GPIO2 triggering nIRQ indicating high temperature .....	8
Figure 7: Temperature vs Resistance .....	9

### Tables

No table of figures entries found.

---

## Temperature Sensing Using the PV88080

---

### 1 Terms and Definitions

NTC	Negative temperature coefficient
OTP	One time programable memory
PCB	Printed circuit board

### 2 References

- [1] PV88080 Datasheet, Dialog Semiconductor Revision 2.2
- [2] Thermistor Datasheet, NCP03XH103J05R 8/29/2016, reference data used with permission and courtesy of Murata Corp

## Temperature Sensing Using the PV88080

### 3 Introduction

This application note describes how to setup and use the temperature sensing function on the PV88080.

### 4 Temperature Sense Function

When using the temperature sense function, the PV88080 provides a 10  $\mu$ A source current from the GPIO2 pin. Add the external components as shown below in [Figure 1](#) to connect an NTC thermistor mounted on the PCB. The output of this external network will be compared to the internal 1.2 V reference. When the voltage level on GPIO2 is less than the internal reference, as a consequence of the NTC resistance dropping with increased temperature, an alert will be sent to the host processor via the nIRQ pin.

If the temperature on the PCB decreases, the SOC system can clear the event signal sourced by the PV88080 via an I<sup>2</sup>C command. Clearing the event returns the nIRQ pin to a low state.

#### NOTE

An external inverter is needed for low active nIRQ signals.

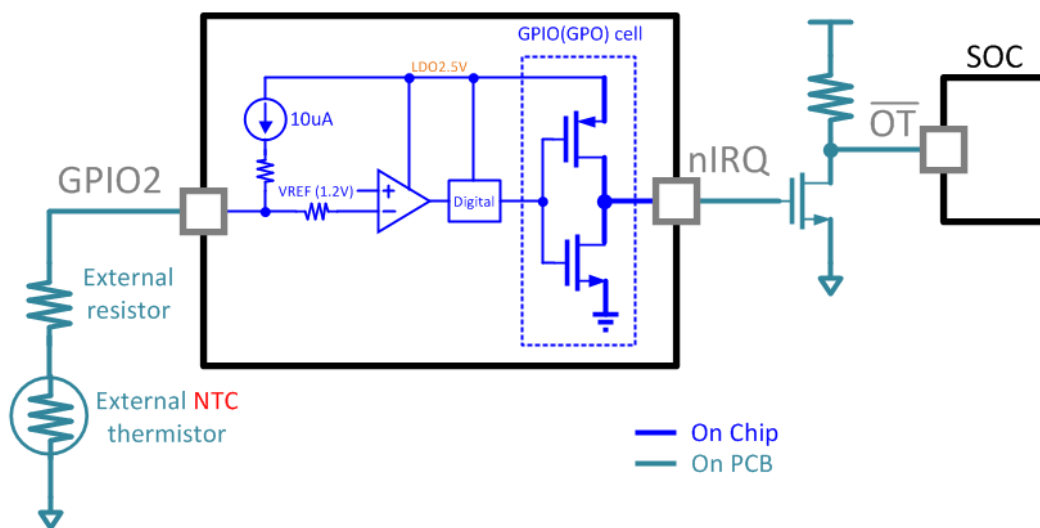


Figure 1: Temperature Sense Block Diagram

#### Resistance Temperature Characteristic

The NTC thermistors' resistance decreases exponentially as the temperature rises, as shown in [Figure 2](#). The NTC thermistors' resistance can be expressed by the following formula:

$$R_x = R_0 \exp B (1/T_1 - 1/T_0)$$

In this formula,  $R_x$  is the resistance at a given temperature.  $T_1$  is the highest temperature of interest, or the detection temperature, for the application.  $T_0$  is the ambient temperature.  $R_0$  is the ambient temperature resistance, and  $B$  is the constant related to the specific NTC type. All temperatures are given in degrees Kelvin.

## Temperature Sensing Using the PV88080

In addition, the B constant indicates a slope of the change in resistance of the thermistor due to a temperature change, and is the basic characteristic of an NTC thermistor.

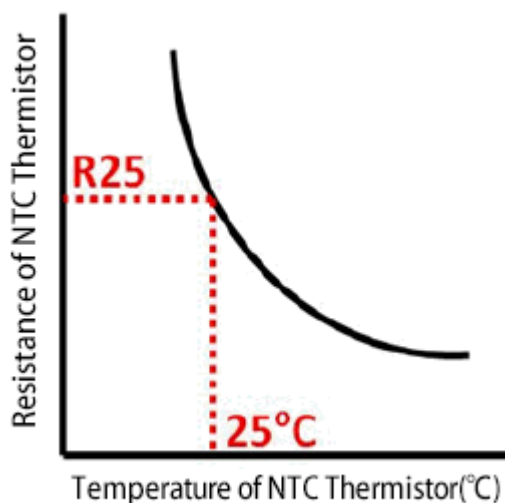


Figure 2: Temperature of NTC Thermistor

### 4.1 Over-Temperature Design Example (100 °C Trigger Point)

This example uses a thermistor with an  $R_0$  of 10 k $\Omega$  and a B value of 3455 in the temperature range of 25 °C to 100 °C. First, the thermistor's resistive value at 100 °C is calculated. Next, the series resistor value is calculated, such that at 100 °C the voltage generated by the 10  $\mu$ A current source is less than 1.2 V.

Data given:  $B = 3455$ ,  $R_0 = 10\text{k } \Omega$  at 25 °C. To convert the temperature from Celsius to Kelvin, add the mathematical constant 273.15.

#### Step 1:

$$B_{(25/100)} = \frac{(100+273.15) \times (25+273.15)}{(100+273.15) - (25+273.15)} \times \ln\left(\frac{10000}{R_X}\right)$$

$$3455 = \frac{111254.6725}{75} \times \ln\left(\frac{10000}{R_X}\right)$$

$$3455 = 1483.4 \times \ln\left(\frac{10000}{R_X}\right)$$

$$e^{\left[\frac{3455}{1483.4}\right]} = \frac{10000}{R_X}$$

$$\therefore R_X = \frac{10000}{e^{2.33}} = 973\Omega$$

Figure 3: Thermistor Resistive Calculation

## Temperature Sensing Using the PV88080

Plotting the above data gives the following two-point characteristics graph.

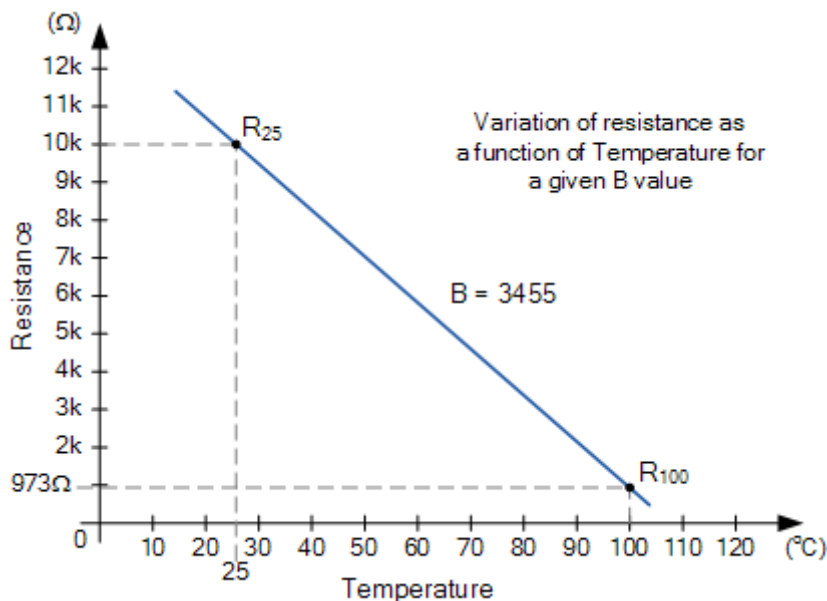


Figure 4: Resistance Variation

Note that in this simple example, only two points are found, but generally thermistors change their resistance exponentially with changes in temperature so their characteristic curve is non-linear. Therefore, the more temperature points calculated, the more accurate the curve.

Table 1: Resistance Variation

Temperature (°C)	10	20	25	30	40	50	60	70	80	90	100	110	120
Resistance (Ω)	18476	12185	10000	8260	5740	4080	2960	2188	1645	1257	973	765	608

Plotting the more complete data points gives a more accurate characteristics curve for the 10 kΩ NTC thermistor with a B-value of 3455.

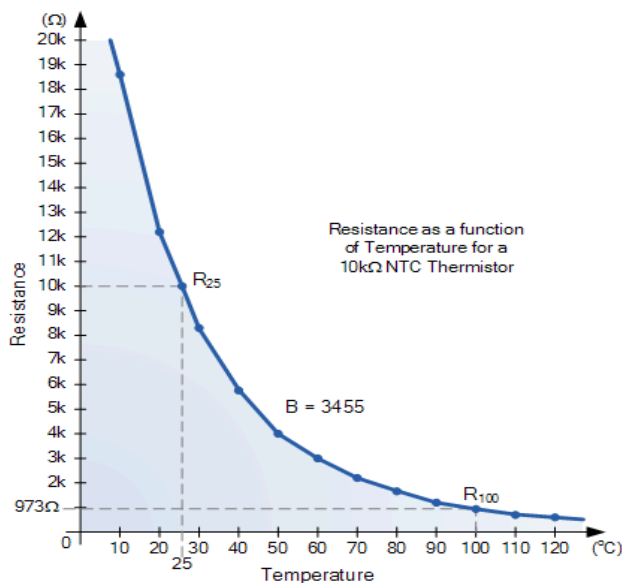


Figure 5: Temperature vs Resistance


**Temperature Sensing Using the PV88080**
**Step 2**

The value of the series resistor for PV88080 is calculated using the total resistance needed to generate 1.19 V at 100 °C and subtracting the resistance of the NTC at this temperature:

- $10\ \mu\text{A} = 1.19\ \text{V} / (R_{\text{NTC}} + R_{\text{SERIES}})$
- $10\ \mu\text{A} = 1.19\ \text{V} / (10000\ \Omega + R_{\text{SERIES}})$  at 25 °C
- $10\ \mu\text{A} = 1.19\ \text{V} / (973\ \Omega + R_{\text{SERIES}})$  at 100 °C
- $R_{\text{SERIES}} = 119\ \text{k}\Omega$

**Table 2: Resistance Variation**

Temperature (°C)	10	20	25	30	40	50	60	70	80	90	100	110	120
Resistance (Ω)	18476	12185	10000	8260	5740	4080	2960	2188	1645	1257	973	765	608

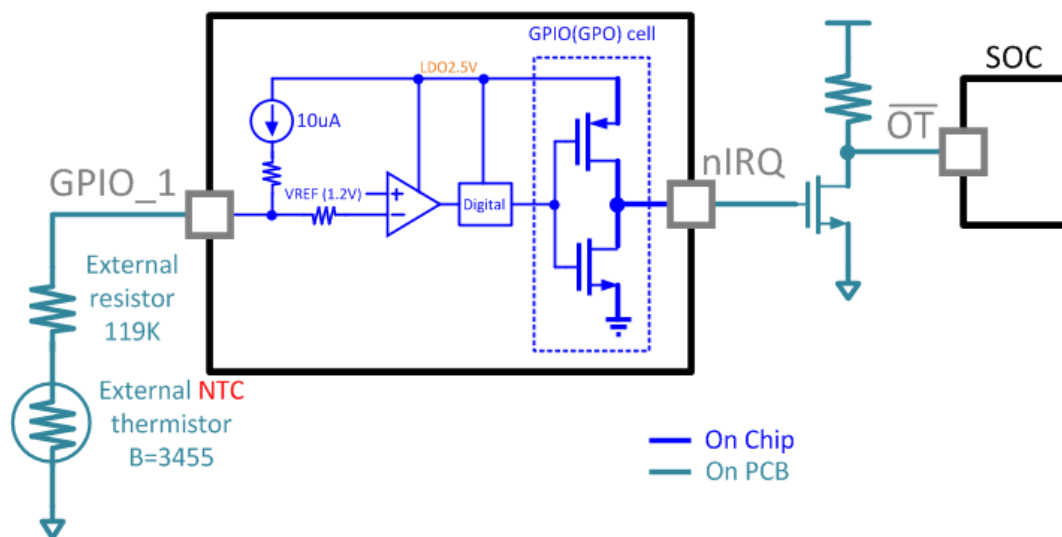
**Figure 6: Temperature vs Resistance**
**Thermal Sense Test Result**

GPIO2 Threshold = 1.20 V from high to low as shown in Figure 6.

## Temperature Sensing Using the PV88080



Figure 7: GPIO2 Triggering nIRQ for High Temperature

### 5 Conclusions

The comparator in the PV88080 can be used for a variety of functions. Described in this application note is a temperature sensing function which can be easily implemented to alert a host processor so that appropriate action can be taken.



## Temperature Sensing Using the PV88080

## Appendix A

**NOTE**

The thermistor is a special type of variable resistive element that changes its physical resistance when exposed to changes in temperature

These heat-dependent resistors can operate in one of two ways, either increasing or decreasing their resistive value with changes in temperature.

There are two types of thermistors: negative temperature coefficient (NTC) of resistance and positive temperature coefficient (PTC) of resistance.

With [NTC thermistors](#), the resistance drops as the temperature increases.

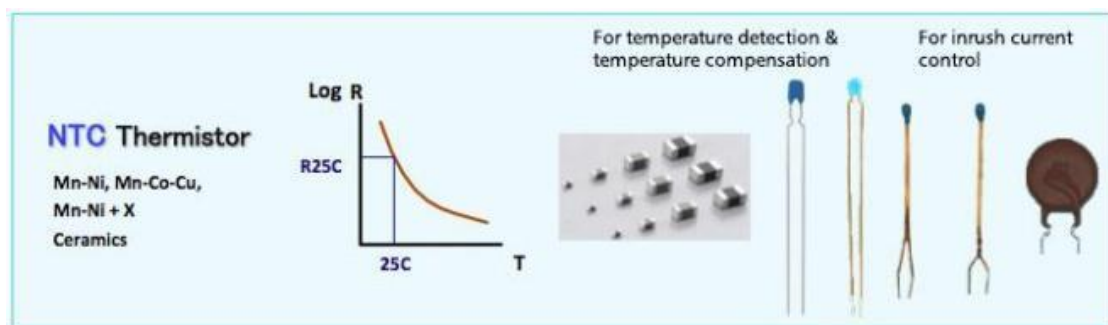


Figure 8: Temperature vs Resistance

## Temperature Sensing Using the PV88080

### Revision History

Revision	Date	Description
1.0	23-July-2017	Initial version
1.5	29-Aug-2017	Added reference title for thermistor

### Disclaimer

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including without limitation the specification and the design of the related semiconductor products, software and applications.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Customer notes that nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document are subject to Dialog Semiconductor's [Standard Terms and Conditions of Sale](http://www.dialog-semiconductor.com), available on the company website ([www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)) unless otherwise stated.

Dialog and the Dialog logo are trademarks of Dialog Semiconductor plc or its subsidiaries. All other product or service names are the property of their respective owners.

© 2017 Dialog Semiconductor. All rights reserved.

## Contacting Dialog Semiconductor

### United Kingdom (Headquarters)

*Dialog Semiconductor (UK) LTD*  
Phone: +44 1793 757700

### Germany

*Dialog Semiconductor GmbH*  
Phone: +49 7021 805-0

### The Netherlands

*Dialog Semiconductor B.V.*  
Phone: +31 73 640 8822

### Email:

[enquiry@diasemi.com](mailto:enquiry@diasemi.com)

### North America

*Dialog Semiconductor Inc.*  
Phone: +1 408 845 8500

### Japan

*Dialog Semiconductor K. K.*  
Phone: +81 3 5425 4567

### Taiwan

*Dialog Semiconductor Taiwan*  
Phone: +886 281 786 222

### Web site:

[www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)

### Singapore

*Dialog Semiconductor Singapore*  
Phone: +65 64 8499 29

### Hong Kong

*Dialog Semiconductor Hong Kong*  
Phone: +852 3769 5200

### Korea

*Dialog Semiconductor Korea*  
Phone: +82 2 3469 8200

### China (Shenzhen)

*Dialog Semiconductor China*  
Phone: +86 755 2981 3669

### China (Shanghai)

*Dialog Semiconductor China*  
Phone: +86 21 5424 9058